Assembly Instructions: 8330-1W / 1SF

BURN RISK! Please turn off power to the fixture before adjusting the angle of the rings to avoid burns from the exposed bulbs.

IMPORTANT:

- ALL INSTALLATION WORK SHOULD BE DONE BY ACCREDITED PROFESSIONAL.
- SHUT OFF POWER SUPPLY AT FUSE OR CIRCUIT BREAKER!
- USE ONLY THE SPECIFIED BULBS. DO NOT EXCEED THE MAXIMUM WATTAGE!

PREPARING FOR INSTALLATION

this fixture may be mounted with the lamp facing up or down.

the old mounting strap.

screws securely.

Important Note: To


avoid snapping the fixture's wires, do not fully twist ring (H) more than 2 times in the same

direction. Instead twist

the ring in the opposite direction to achieve the

look vou desire.

For Customer Service, please contact the place of purchase.

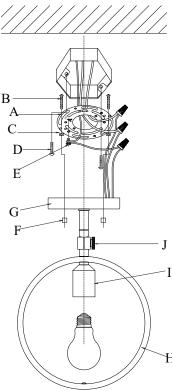

Semi-flush Installation

CONNECTING THE WIRES

3. Attach the fixture's wires to the power supply wires from the junction box. Connect black to black (or smooth); white to white (or ribbed); ground to ground (green or copper). Twist the ends of the wire pairs together, then twist on a wire connector. Make sure all twists are in the same direction. If there is no ground wire (green or copper) from the junction box, locate ground screw (E) on mounting strap (A) and wrap the fixture's ground wire around the green ground screw (E). Use a screwdriver to secure ground screw (E) onto the mounting bracket. Tuck all wires neatly into the junction box.

FINISHING THE INSTALLATION

4. Place the fixture's backplate/canopy (G) over mounting strap (A) so that the holes in mounting strap (A) line up with the holes in backplate/canopy (G).

5. Thread deco nuts (F) onto the exposed threads of mounting screws (B) until backplate/canopy (G) is snug against the wall/ceiling.


6. Install a light bulb in socket (I - not provided) based on the fixture's specifications. Do not exceed the maximum wattage.

7. Please note that you can adjust the angle of the light source/ring up and down at the joint using thumb screw (J). Twist ring (H) to change the look/configuration. See the Burn Risk and Important notes above.

Your installation is complete. Turn on the power and test the fixture.

CLEANING TIPS

Treat the fixture gently! Regular cleaning will reduce the need for deep cleaning. For regular cleaning, turn off the light and wipe down the fixture with a clean lint-free cotton or microfiber cloth. Never spray cleaner directly onto the fixture.

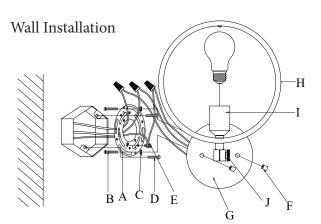

Remove all of the contents from the carton. See the important notes above. Shut off the power at the circuit breaker and completely remove the old fixture from the wall or ceiling, including

This fixture may be mounted on the wall or as a semi-flush on the ceiling. For wall applications,

1. Mounting strap (A) may be attached to backplate/canopy (G). If the mounting strap is attached,

backplate/canopy. Test backplate/canopy (G) on mounting strap (A) to ensure that the backplate will hang straight and enough of the threads of mounting screws (B) will be exposed for deco nuts (F) to

unscrew deco nuts (F) to detach. The mounting strap contains several pairs of threaded holes. Find the pair of holes that matches the spacing of the holes on the junction box and your fixture's

2. Place mounting strap (A) over the junction box so that mounting screws (D) may be inserted. Secure mounting strap (A) to the junction box with mounting screws (D) and a screwdriver. Tighten the

fit. Place the fixture aside. Pull the house wires through the center of mounting strap (A).

How to Identify the Fixture's Wires			1	House Wires
Hot	<u>Neutral</u>	Ground	Fixture Wires	—— Hot
Smooth	Ribbed	Bare Metal, Green, or Green Inner Thread	Hot Ne	Neutral
Black	White		Neutral	Ground
Black Inner Thread	White Inner Thread		Ground	

